INSTALLATION INSTRUCTIONS

3 Series 4dr **BMW-3SER-4-B**

Parts List



x2

x2

x4

x2

INSTALLATION INSTRUCTIONS - BMW-3SER-4-A

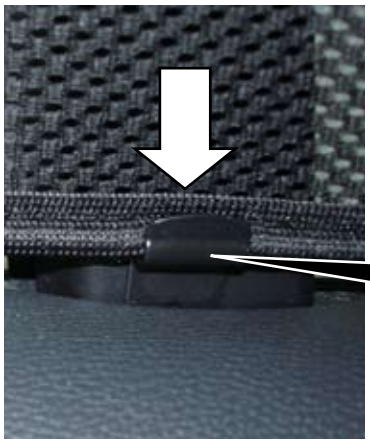

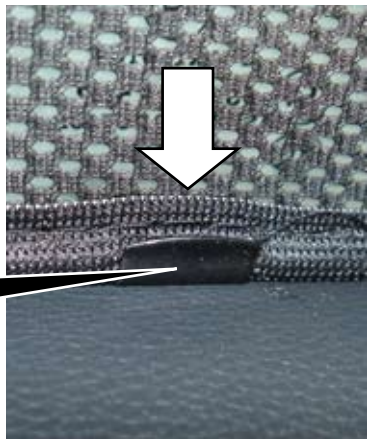

INSTALLATION INSTRUCTIONS - BMW-3SER-4-A