


INSTALLATION INSTRUCTIONS





BMW 3 SERIES ESTATE 2013

BMW-3SER-E-C


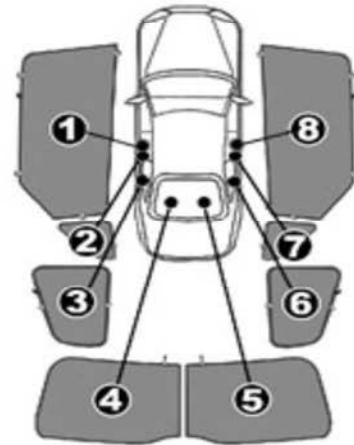


COMPONENTS INCLUDED





SHADES

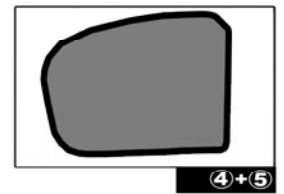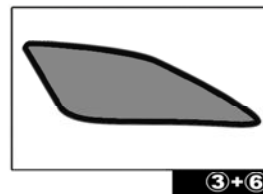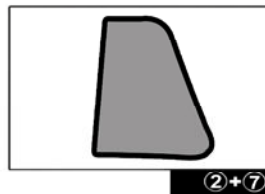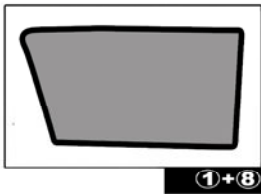









FIXING CLIPS

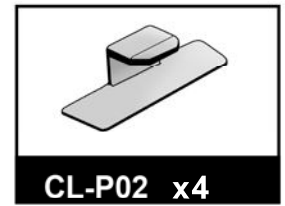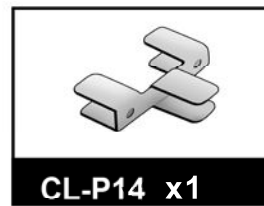








SIDE SHADE INSTALLATION

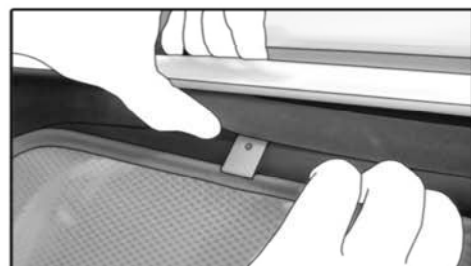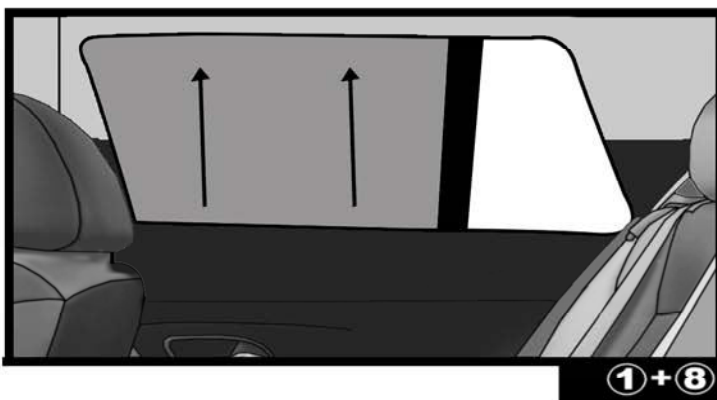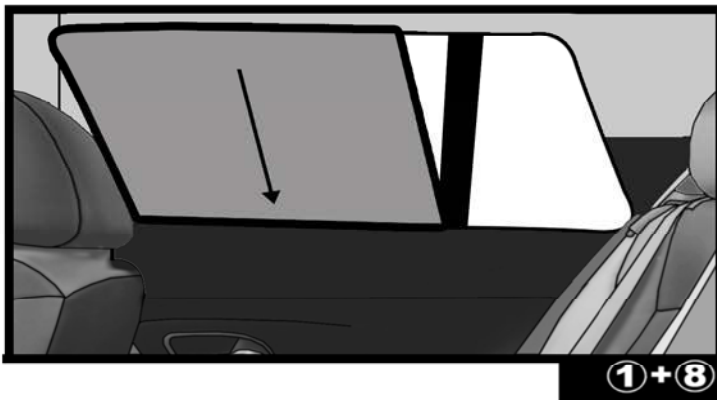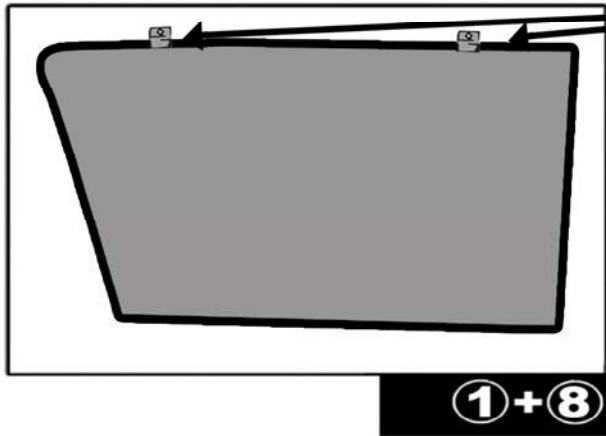



SIDE SHADE INSTALLATION

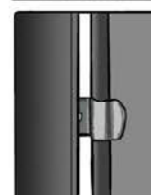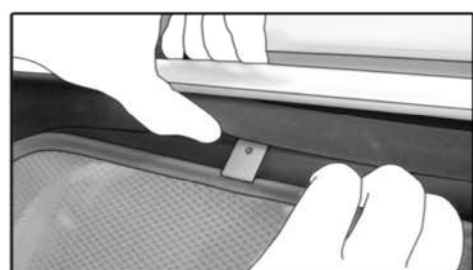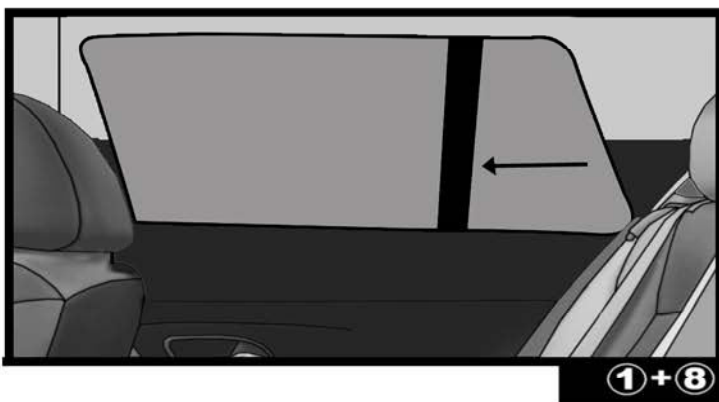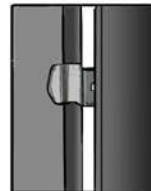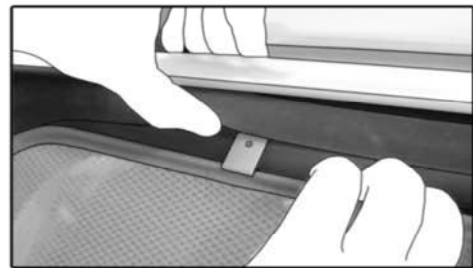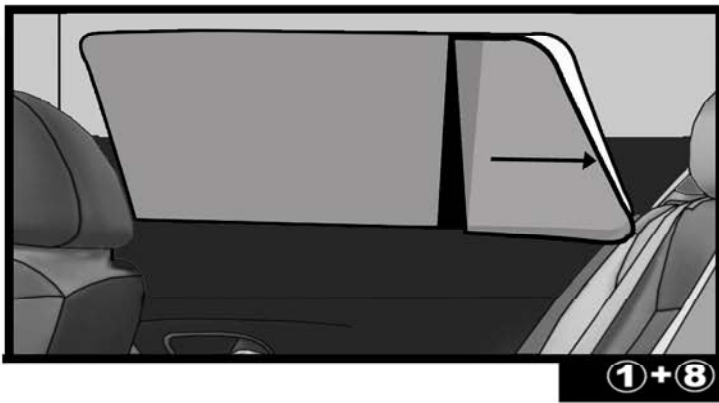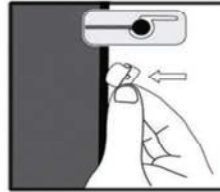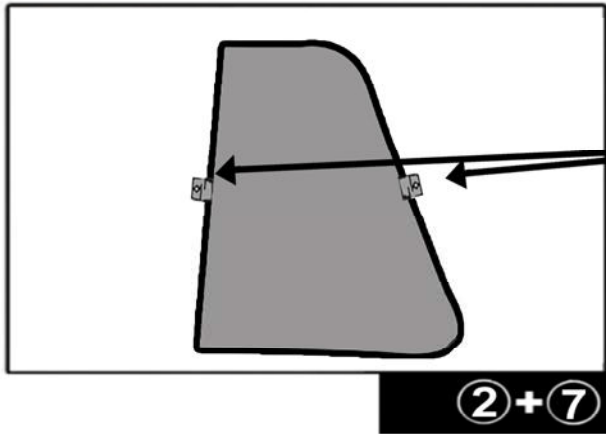

QUARTER LIGHT SHADE INSTALLATION

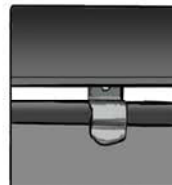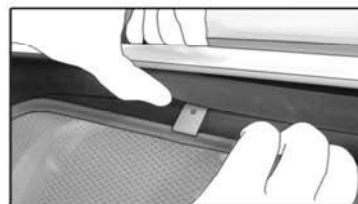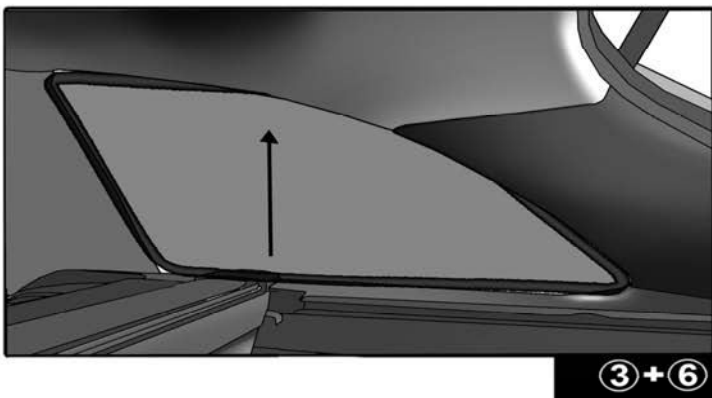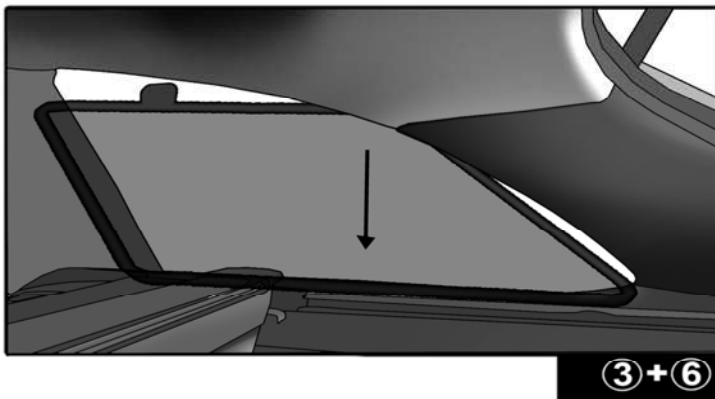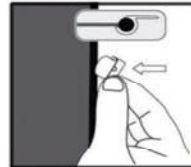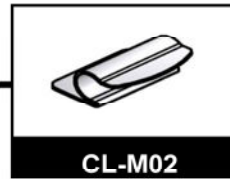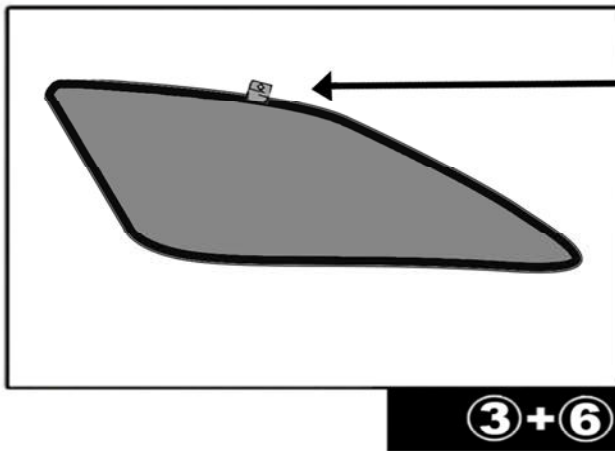

REAR SHADE INSTALLATION

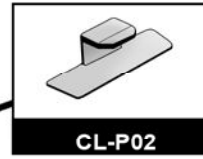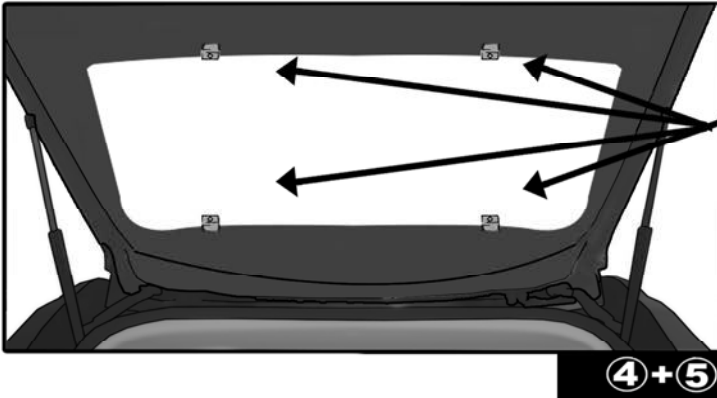

Use Adhesion Promotor

